

Marquee Fire Pit Table

Installation Instructions for Marquee fire pit



Contents

Required Tools	2
Assembly Instructions	.3
Gas Connection	.4
Igniter Installation	.6
Glass Installation	.7
Position Your Propane tank	.8

Required Tools



Utility Knife

To cut and remove packaging

2 Open Ended Wrenches

To secure gas connections



Leather Gloves

To protect hands from rough edges found on coffee table during installation.



One AAA battery (not Included)

Required for electric spark igniter installation



Power Drill with #2 Phillips Tip Bit

To open the crate for access to fire pit



Phillips Screw Driver

To fasten bolts to the burner




Four people are required for this installation

Assembly Instructions

- Open the crate and remove all pieces. Components may be heavy and require the assistance of 3 other people helping to set them in the desired location.
- 2. Set the base in the desired location and place the concrete top onto the base.



3. Align holes from burner pan to burner tray. Fasten the burner to the burner pan using the 6 nuts and bolts included with your fire pit.

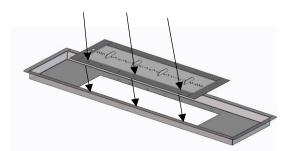


Gas Connections

Read and understand your Crystal Fire owner's manual before beginning burner hookups or using the device.

<u>Do not use Teflon tape or pipe dope on flare fittings.</u>


1. Reach inside the burner cut-out and attach natural gas supply line using a 3/8" flare fitting, or attach the included black rubber propane hose and regulator to the bottom fitting of the control valve.

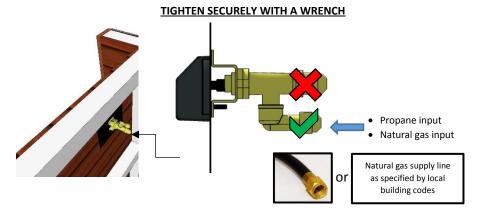

2. Lay the burner upside down on a flat, soft surface to avoid scratching the polished metal. Ensure the correct orifice is installed for the fuel type you are using (see Crystal Fire user manual included with burner for orifice sizing information) Attach the included metal flex hose to the burner.

TIGHTEN SECURELY WITH TWO WRENCHES




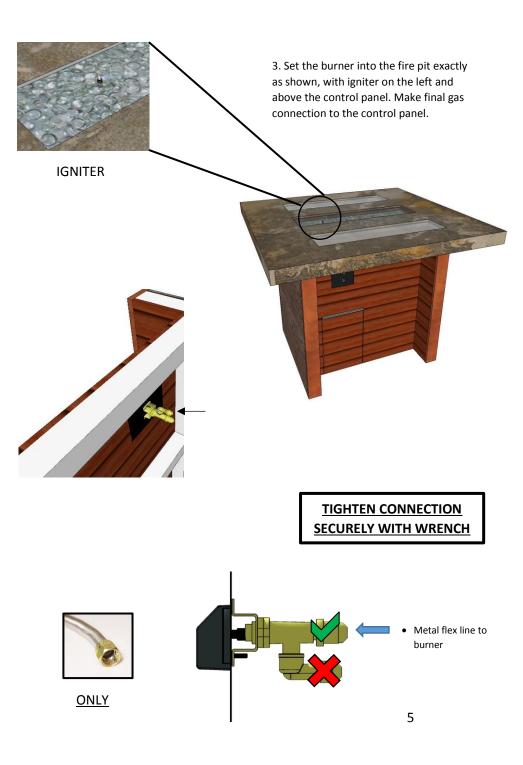

Igniter Installation


- Make sure the valve is in the OFF position before beginning.
- Install sparker as shown, using an AAA battery (not included). Negative end should be placed inside the CF-SPARKER, positive end on the outside of CF-SPARKER.



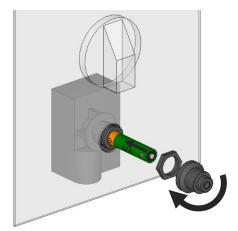

Sparker will not operate correctly without an ignition **and** ground wire attached.

  Plug both BLACK wires hanging from the burner into the back of the sparker box. If an orange wire is present, do not use it. Orange wire is for automatic ignition system add-on only.



Test system by pushing the button on the igniter. 6
 Consult the troubleshooting section if spark is weak, intermittent, or not present.

After installing igniter and making gas connections, verify that they are tight and that no leaks are present using a solution of soapy water or a commercially available leak-check solution.

Glass Installation

- Scatter the included glass beads evenly on to the burner surface using all of the beads that came with the fire pit. <u>DO NOT BURN WITHOUT GLASS</u> <u>OR OTHER DECORATIVE MEDIA PRESENT.</u>
- 2. With concrete top on base, locate 3 glass pieces that were included with your fire pit. Attach bumper pads to textured side of glass pieces. Attach 1 bumper bad to each of the corners, of each glass piece. Set glass pieces into the 3 precut openings, with silicon pads facing downward. Burner cover with finger holes will sit on top of burner pan, the separate 2 solid glass covers will sit in outside openings.



Position Your Propane Tank

(If Applicable)

- Remove door, connect the propane hose/regulator to the propane tank and hand-tighten (DO NOT USE A WRENCH) and slide the propane tank in completely to ensure the door closes properly.
- 2. With tank inside base, ensure that no hoses, wires, or anything else is kinked or touching the burner pan.





IMPORTANT

Please consult your Crystal Fire instruction manual for detailed instructions and important information related to hooking up your linear burner, including safety information, proper tightening of connections with two wrenches and full burner setup and lighting instructions.

DO NOT ATTEMPT TO INSTALL NF-7X19 BURNER WITHOUT FIRST CONSULTING THE CRYSTAL FIRE OWNER'S MANUAL.

WARNING

After consulting the manual and following instructions, remember; before operating, all gas connections must be fully checked for leaks

Warranty: Fire pit tables are covered under a 1-year manufacturer's warranty. Please visit http://www.outdoorrooms.com/warranty-form to register your

14400 Southcross Drive West • Suite 100 • Burnsville, MN 55306 Toll Free: 1-866-303-4028 • Sales@OutdoorRooms.com